

9. Firmware Update

In order to maintain proper performance of the product, it is essential to have the most up-to-date software.

Important: Make sure AC power adapter remains connected during the firmware update. A power disruption during the update process can corrupt the system firmware. If the power is off during firmware update, fatal damage may be caused to the product.

9.1 Updating firmware from HDD

① Copy the latest firmware file (install.img) on the root directory of the hard disk drive.



② Press **HOME** and select **Setup** icon, and then press **OK**.

③ Move to **System** icon, and then select Firmware Update option. Highlight System Upgrade and press **OK**. This will restart the system.

④ After restarting, the system automatically enters firmware upgrade mode.

⑤ Once the update process is completed, the player will start again. Once the player restarts, the new firmware is automatically loaded.

9.2 Updating firmware from USB drive

① Copy the latest firmware file (install.img) to a USB drive's root directory.

② Connect the USB drive to the player's USB port.



③ Press **HOME** and select **Setup** icon, and then press **OK**.

④ Move to **System** icon, and then select Firmware Update option. Highlight System Upgrade and press **OK**. This will restart the system.

⑤ After restarting, the system automatically enters firmware upgrade mode.

⑥ Once the update process is completed, the player will start again. Once the player restarts, the new firmware is automatically loaded.

Note:

- Other functions will not activate while firmware update takes place
- It may take 3 ~ 5 minutes to update firmware.